INSTALLATION INSTRUCTIONS

# ROLLER SHADES

**Cassette Valance**


**Cordless | Cord Loop | Motorization**

## 1. Install the Brackets

**Important:** Make sure the mounting surface is level. Brackets must be aligned and level for shade to operate properly. Shim brackets if necessary.


## Medium and Large Cassette

**Important:** Make sure the mounting surface is level. Brackets must be aligned and level for shade to operate properly.

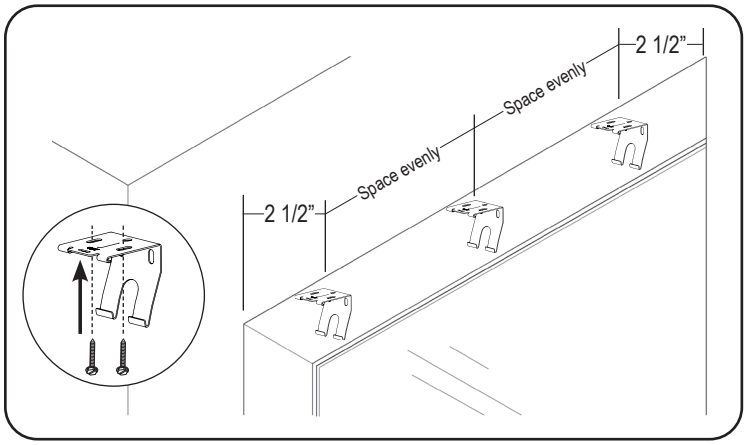


**Inside Mount**:

- Measure 2 ½" inward from each side of the window frame.
- Install the brackets leveled & aligned to each other using the screws provided through the top of the brackets.
- If applicable, evenly space out additional brackets between the brackets on both ends.
- See image above.

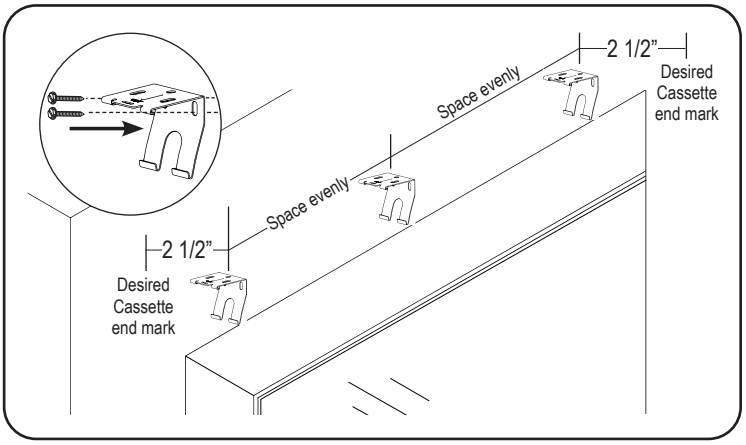



**Outside Mount**:

- Center the shade over the window opening at the desired height & width.
- Mark the location of the "Desired Cassette end mark" on both ends of the cassette.
- Measure 2 ½" inward from the "Desired Cassette end marks" for the location of the brackets. If applicable, evenly space out the additional brackets between the brackets on both ends.
- Install the brackets leveled & aligned to each other using the screws provided through the side of the brackets.
- See image above.

## 2. Install the Shade


## Medium and Large Curved Cassette

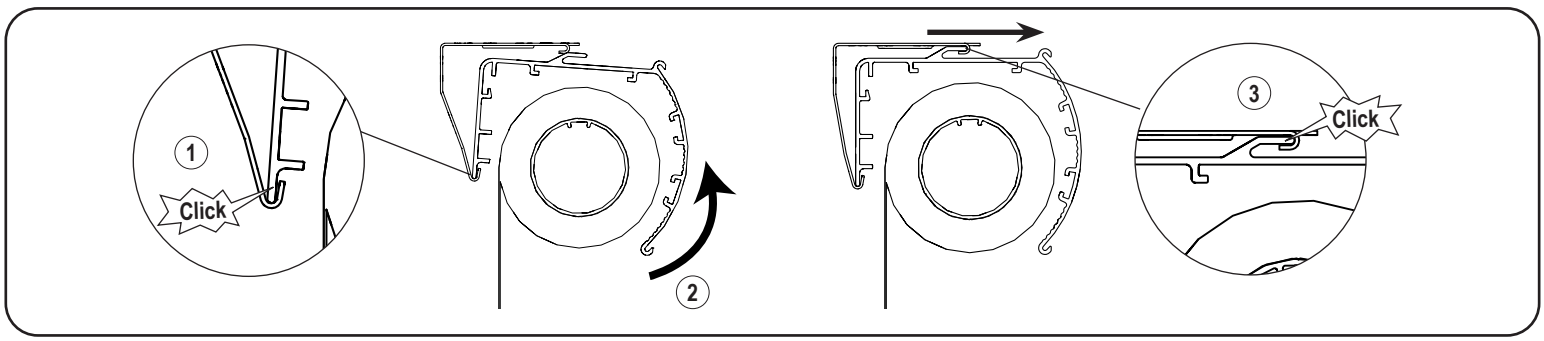

# INSTALLATION INSTRUCTIONS


## 3. Remove the Shade (Only if Necessary)

### Medium and Large Cassette

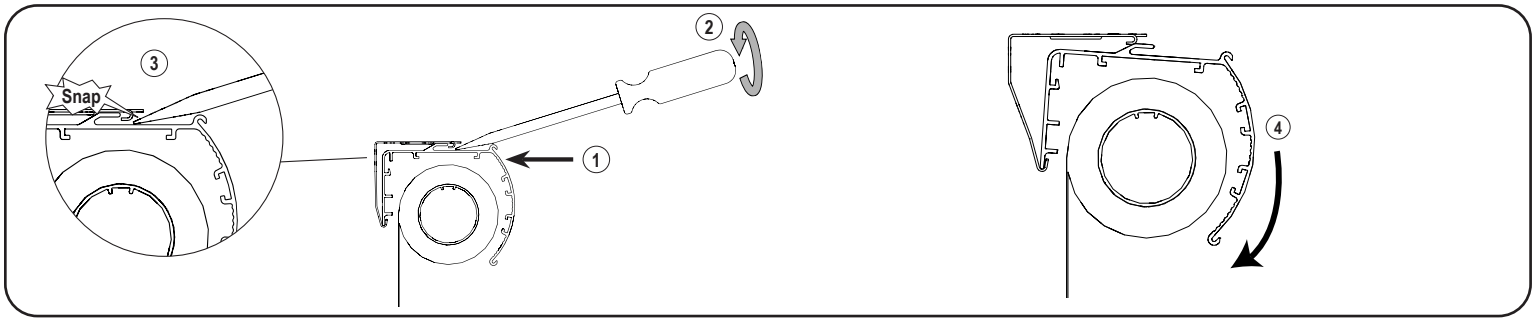


## 4. Motorization

### Before You Begin

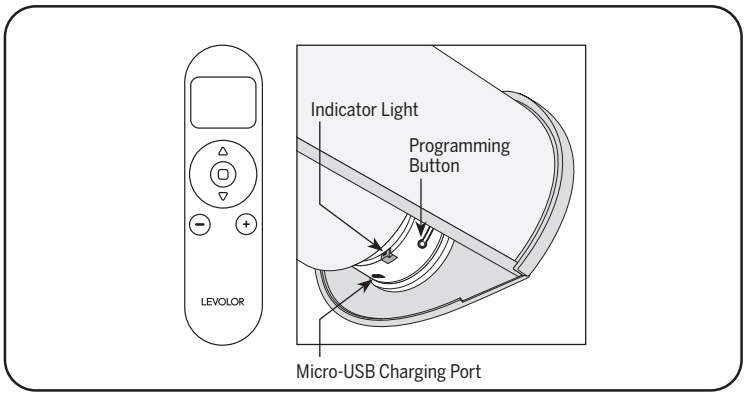


**PAIR SHADE BEFORE INSTALLING**


**REMOTE CONTROL**

- Use the – and + buttons to select the channel to pair to.
- Press and hold the programming button on the window covering for about 2 seconds until the shade jogs and/or beeps once.
- In the next 10 seconds, press and hold the ☐ on the remote until the shade jogs twice and/or beeps three times.

**USING THE INMOTION APP**


- If you purchased a hub, download the LEVOLOR® InMotion™ app to get started.
- Shade can be directly paired to app, but it is recommended to pair to remote first.

### Motorization — Remote Operation

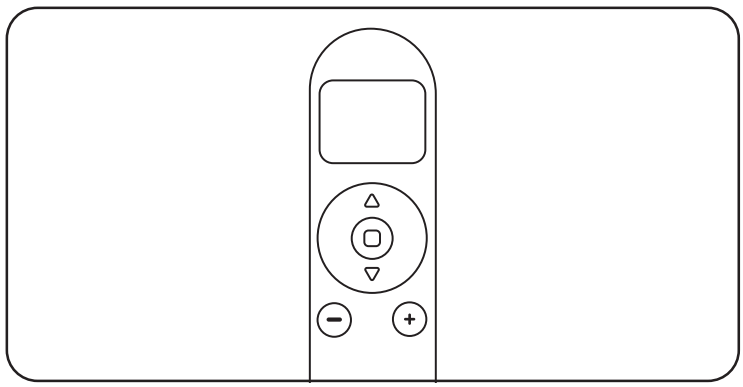

Click this link to refer to the Remote Operation instructions.

### Motorization — Battery Charging

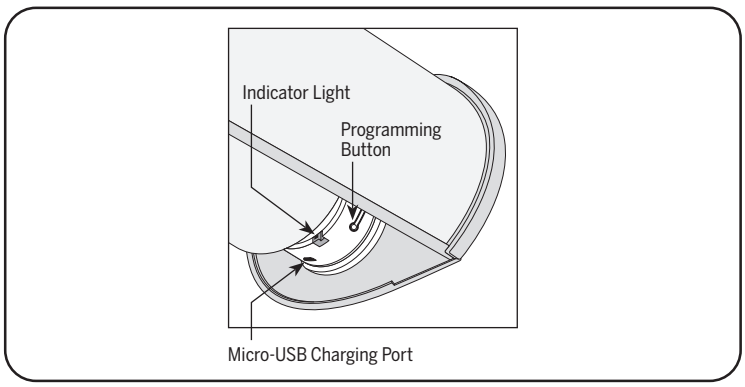


Rechargeable battery is integrated into shade headrail. Use the standard micro-USB cable or attach the magnetic charging adapter to the 5V power adapter for simple and easy charging.


**Indicator light battery status:**

– Low (red flash)
– Charging (green flash)
– Charged (green solid)

It is recommended to fully charge shade prior to first use.

## 5. Attachments


### 5a. Attaching the Beaded Cord Tensioner/Continuous Loop Control

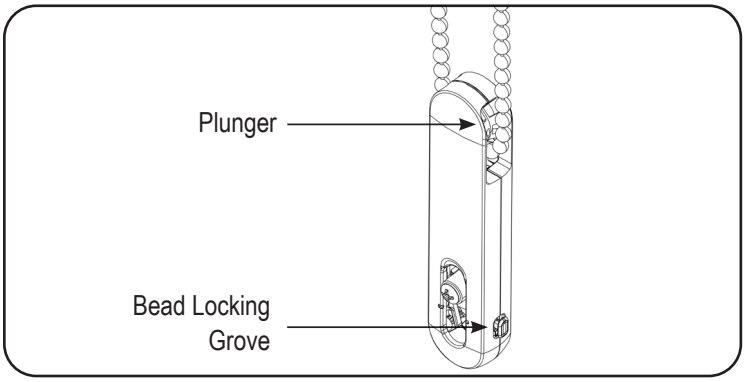


**NOTE:** For the shade to operate properly, the tensioner must be correctly mounted and secured.

Click this link to refer to the Installation Instructions for the Bead Chain Loop, Universal Cord Tensioner

### 5b. Install the Hold Down Bracket

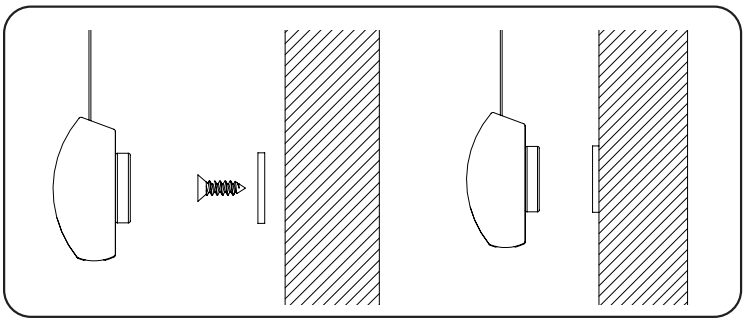


**Important:** The magnets will be pre-installed onto the bottom rail. The round catch plate will be provided.

Lower the shade to align the magnet with the location for the catch. Once the location has been identified, mark the position of the catch onto the wall by pressing the screw into the wall. Raise the shade and install the catch plate to the marking made and with the screw provided.

When shades are fully lowered and the bottom rail is attached to either hold down brackets, detach the bottom rail from the brackets/catches before raising the shade.

### 5c. Attach the Wand — Motorized Wand

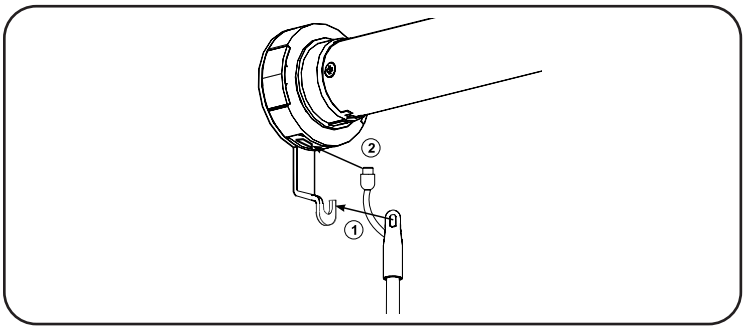


With the wand control buttons facing you, attached the top of the wand on the metal hook support **(1)** on the motor control side, then connect the cable into the motor head **(2).**

Click this link to refer to the programming guide for InMotion(TM) Wand.

# INSTALLATION INSTRUCTIONS

## UPDATED SAFETY INSTRUCTIONS FOR MOTORIZED SHADES

Any accessible electrical wire must be less than 22 cm in overall length. Any accessible wires that are a power source for automated shades MUST meet one of the following requirements:

**Option 1**


The accessible electrical wire must be shrouded with a rigid cover so that the wire is shielded in such a way that it cannot be touched when it is installed. The shroud/rigid cover makes the electrical wire unaccessible.


**Option 2**

The accessible electrical wire must be installed by stapling/anchoring it at intervals of less than 22 cm, and the staples/anchors cannot be removable with 35 Nm of force, or less. The stapling/anchoring make the electrical wire unaccessible.

**Option 3**

A combination of option 1 and option 2; the use of a shroud/rigid cover and stapling/anchoring the electrical wires at intervals of less than 22cm make the electrical wire unaccessible.

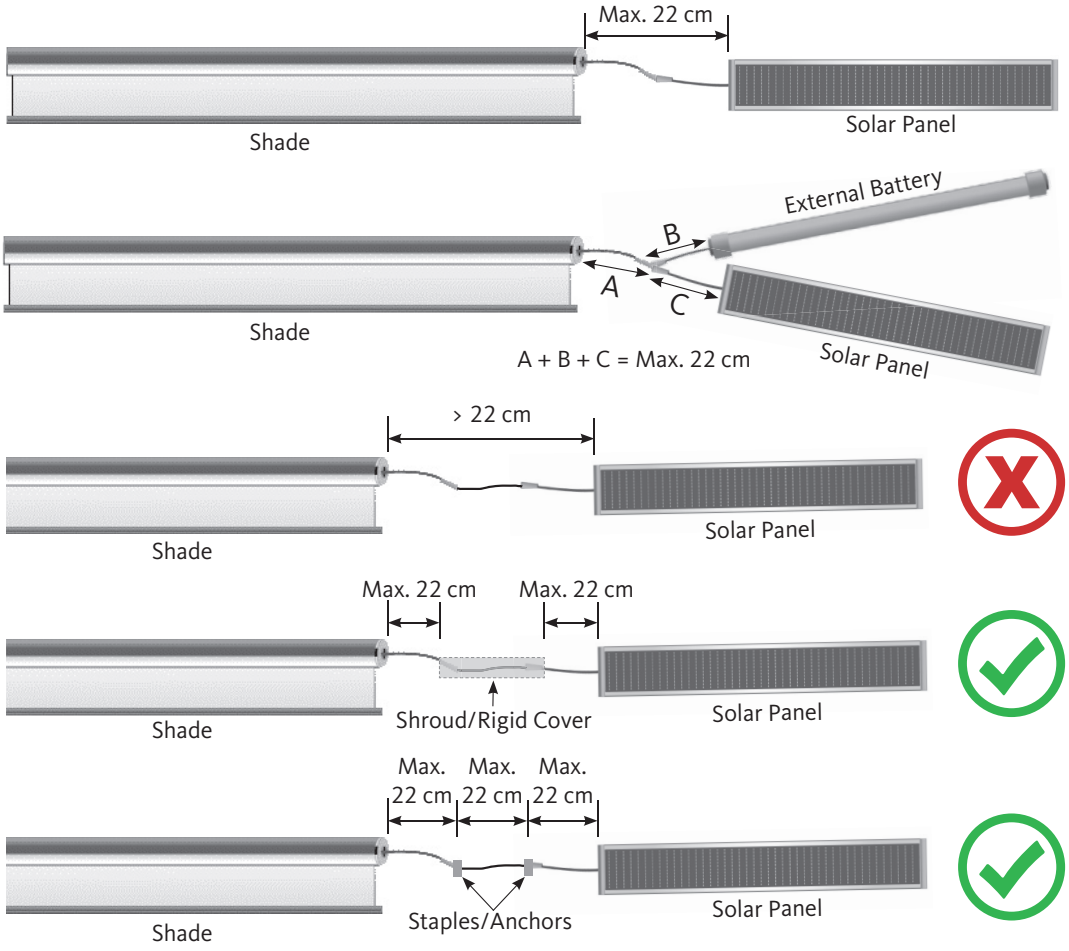

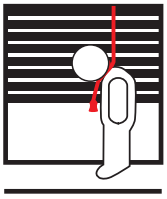**⚠ WARNING**

**Window Blind Cord Strangulation Risk**

Window blinds with a damaged or loose tension device or retractable cord that fails to fully retract pose a strangulation risk to children. To avoid this potential strangulation risk, consider purchasing cordless products or products with inaccessible cords.

**⚠ ADVERTENCIA**

**Riesgo de Estrangulamiento en Cuerdas de Persianas**

Las persianas con un dispositivo tensor suelto o dañado o con una cuerda retráctable que no se ajusta completamente representan un riesgo de estrangulación para los niños. Para evitar un posible riesgo de estrangulamiento, considere comprar productos inalámbricos o productos con cuerdas inaccesibles.