
INSTALLATION INSTRUCTIONS

CELLULAR, ROLLER AND BANDED SHADES


Side Channels to Block Light

1. Install the Shade and Lower the Shade

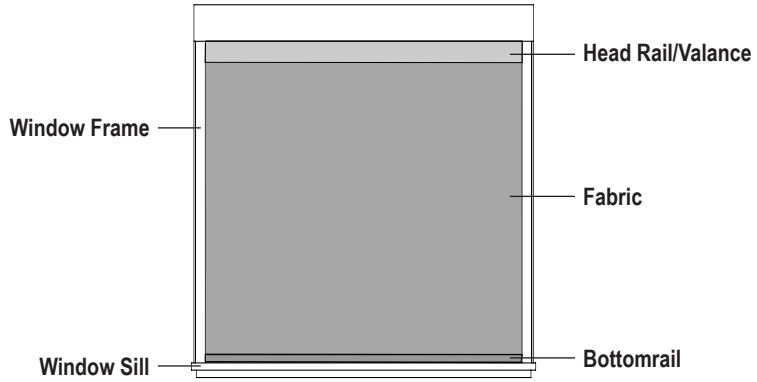

Note: For instructions on how to install the shade – refer to the provided *Cellular, Roller, or Banded Shade Installation instructions*.
Once the shade has been installed, lower the shade to rest on the window sill.

2. Prepare the Side Channel

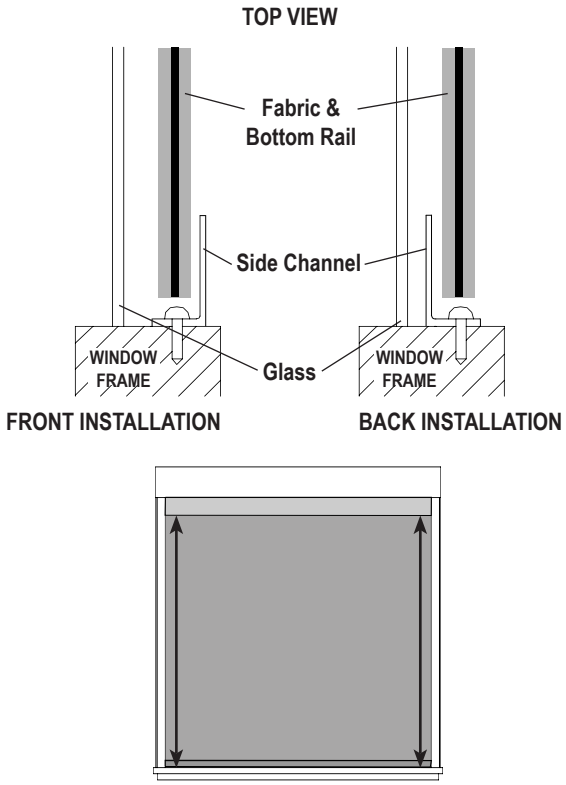


Note: Before installing your side channels, determine if you will be mounting the product in front or behind the material.

First, measure the height of the opening where side channel is to be installed and verify that each piece fits in the intended space. Adjust with a saw if needed.

Important: For Cassettes, measure from the bottom of the top treatment to the window sill.

3. Install the Side Channel

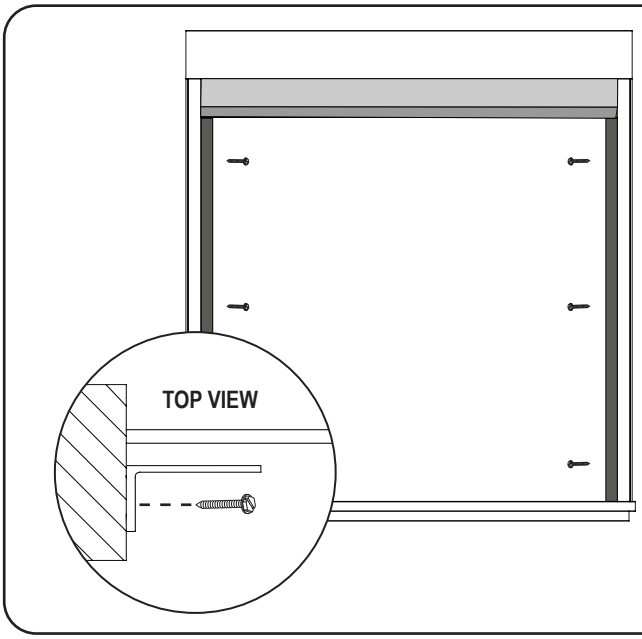


Once mounting location is determined, install your side channels with the provided installation screws, evenly spaced.

Note: Raise the shade as needed, as to not damage the fabric.

Child Safety

⚠WARNING ⚠ADVERTENCIA

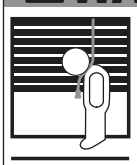

Window Blind Cord Strangulation Risk
Window blinds with a damaged or loose tension device or retractable cord that fails to fully retract pose a strangulation risk to children. To avoid this potential strangulation risk, consider purchasing cordless products or products with inaccessible cords.

Riesgo de Estrangulamiento en Cuerdas de Persianas
Las persianas con un dispositivo tensor suelto o dañado o con una cuerda retráctable que no se ajusta completamente representan un riesgo de estrangulación para los niños. Para evitar un posible riesgo de estrangulamiento, considere comprar productos inalámbricos o productos con cuerdas inaccesibles.