LEVOLOR


HOW TO INSTALL BANDED SHADES

CORDLESS LIFT | CORD LOOP | MOTORIZED

Read all instructions before starting installation.

Scan for Installation Instructions in Spanish


PARTS INCLUDED (Quantity varies by order)



Mounting Bracket(s)





Screws

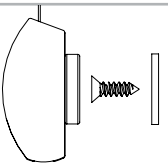

Hold Down Bracket(s)


TOOLS NEEDED







3/32 in
(2.38 mm)



BRACKET INFORMATION


- For the shade to operate correctly, it's important that the brackets are mounted level.
- If needed, use shims to help adjust and align the brackets.
- The number and placement of brackets is the same whether you're installing inside or outside the window frame.

Shade Width	Bracket Quantity
Up to 54"	2
54-1/8” to 96”	3
96-1/8" to 112”"	4

1 PLACE SHADE IN DESIRED LOCATION AND MARK FRONT EDGE


DON'T FORGET: Before marking bracket locations, check clearance depth required to avoid obstructions such as window cranks or handles.

INSIDE MOUNT

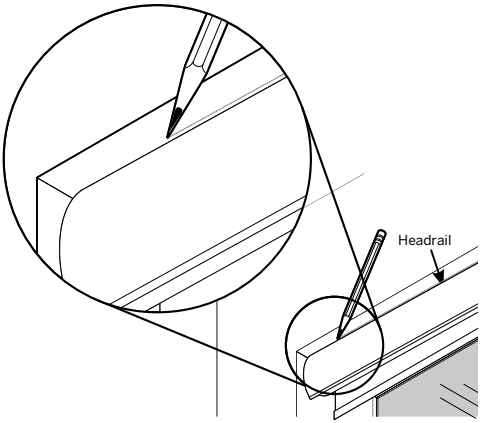

Minimum Depth	Fully Recessed	
1-1/2"	Medium Cassette	3-3/4"
	Large Cassette	4-3/8"


OUTSIDE MOUNT

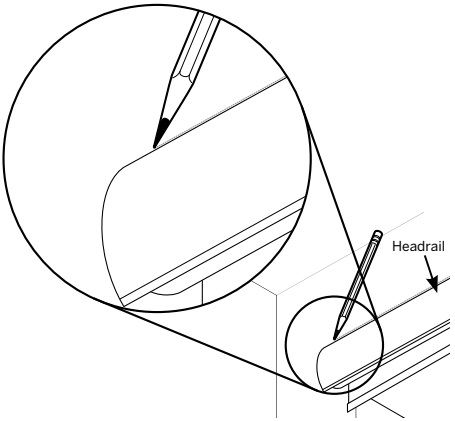


Minimum Height	
Medium Cassette	3-1/8"
Large Cassette	4"

2 MEASURE 2-1/2" IN FROM SHADE EDGE ON BOTH ENDS AND MARK

INSIDE MOUNT

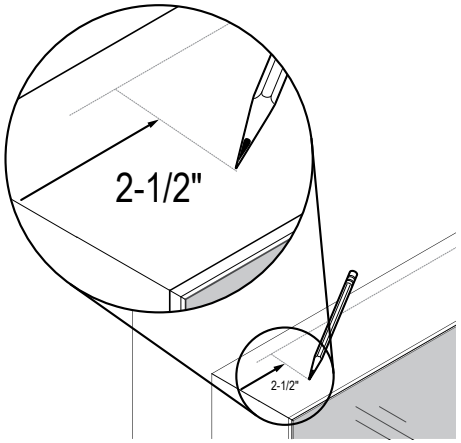


OUTSIDE MOUNT

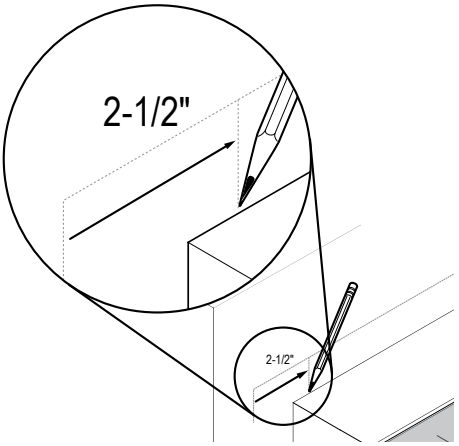


3 MARK BRACKET LOCATION, CENTER ANY ADDITIONAL BACKETS IF APPLICABLE

INSIDE MOUNT

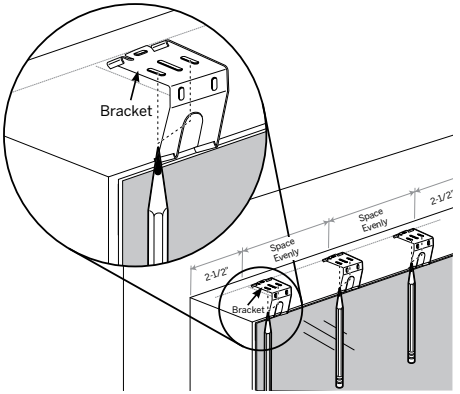


OUTSIDE MOUNT

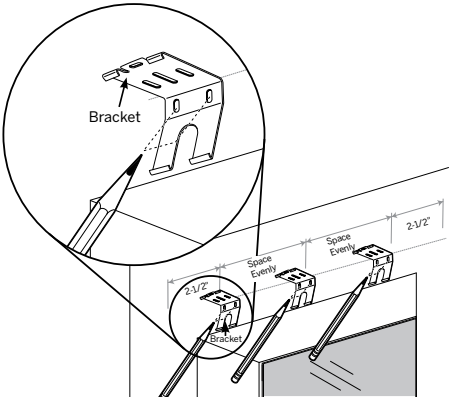


4 PRE-DRILL HOLES USING A 3/32" DRILL BIT

INSIDE MOUNT

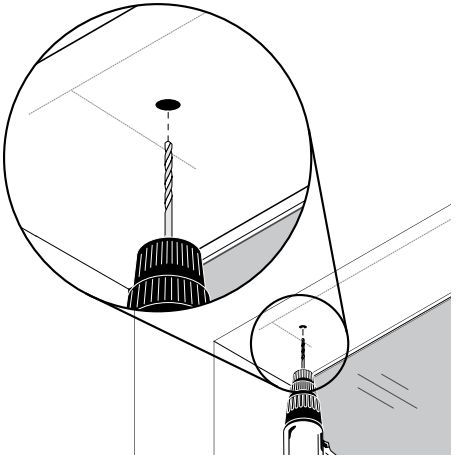


OUTSIDE MOUNT

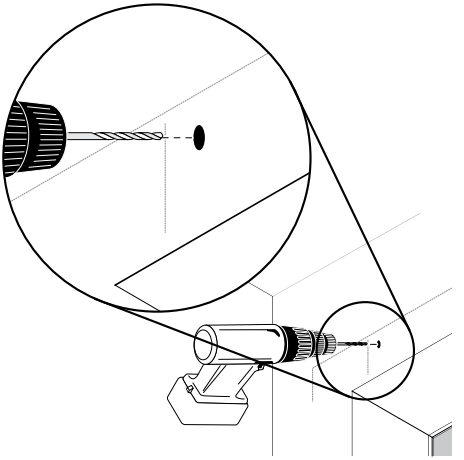


5 INSTALL MOUNTING BRACKETS USING SUPPLIED SCREWS

INSIDE MOUNT

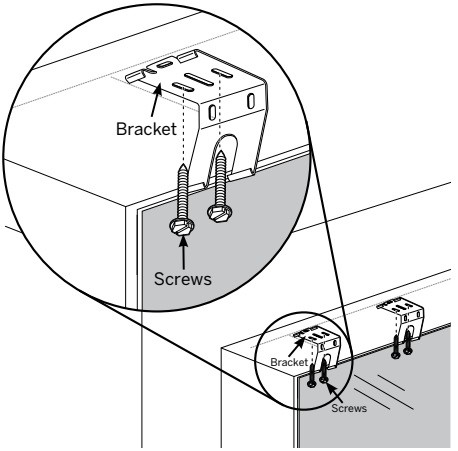

OUTSIDE MOUNT

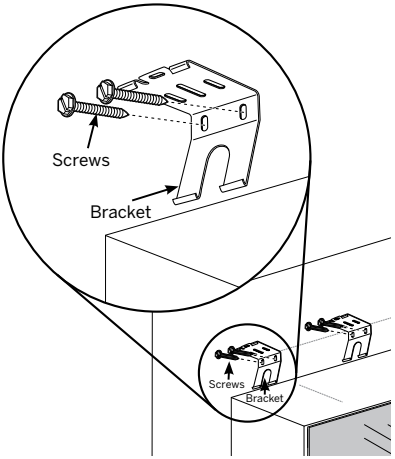

CAUTION: Use drywall anchors (not provided) when mounting into drywall. Failure to properly anchor shade could cause shade to fall possibly resulting in injury.

6 INSTALL THE SHADE

PRIOR TO MOUNTING SHADE

Motorized: pair shade prior to mounting. Refer to programming guide included with remote or scan below. Pairing takes under 1 minute.


InMotion Wand: Refer to the programming guide included with the wand for operation, or scan below.

Scan for Motorization Remote Pairing Guide

Scan for InMotion Wand Programming Guide


IMPORTANT: Do not remove lock pin until the shade is installed. Please see Step 8.

With the front of the shade facing you, rotate the headrail upward until the front edge of the headrail engages with the bracket. Push gently until you hear a click. This confirms the shade is locked into place.

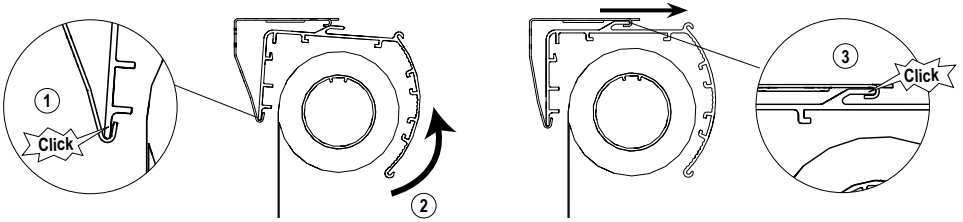


REMOVAL OF SHADE (ONLY IF NECESSARY)

- Place a flat-head screwdriver between the shade's top rail and the mounting bracket.
- Gently twist the screwdriver until you hear or feel the snap that releases the shade from the bracket.
- Once released, carefully tilt the top of the shade forward and down.
- Lift the shade out of the brackets.

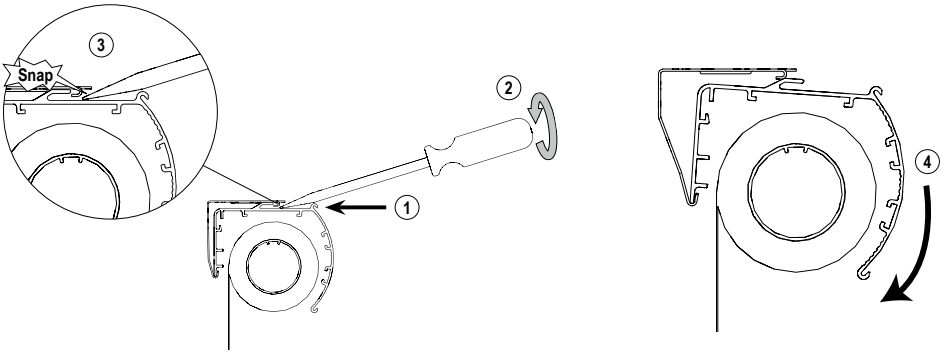

7 FOR CONTINUOUS LOOP ONLY

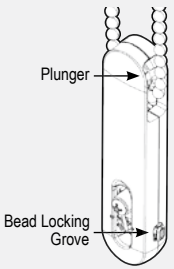

Refer to the installation instructions included with the Beaded Cord Tensioner.

For the shade to operate properly, the tensioner must be correctly mounted and secured.

Scan for Bead Chain Loop Universal Cord Tensioner Instructions


8 CORDLESS LIFT - LOCK PIN

Note: Illustration shown without a Cassette for clarity.

Important: Do not pull the lock pin until shade is securely assembled onto the brackets. Keep the lock pin in a safe place after it has been removed from the installed shade. The lock pin will be needed again if the shade needs to be removed.

With the shade installed and prior to operating, remove the lock pin by pulling it downward.

If the shade needs to be removed, raise the shade and **insert the lock pin back into the shade prior to removing the shade** from the installation brackets. See Step 6 for Removal of Shade instructions.

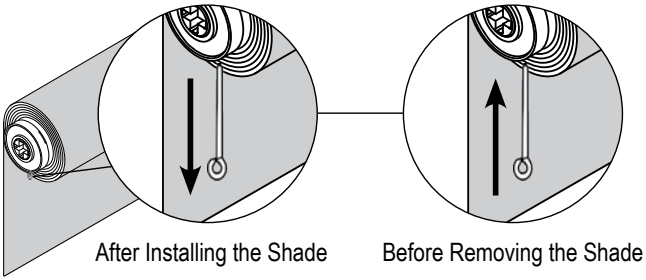


TROUBLESHOOTING

Problem	My shade won't snap into the installation brackets.
Solution	Ensure installation brackets are aligned and level. Shim the brackets if necessary to achieve a level alignment.
Problem	My shade is difficult to raise (or lower), or will not raise (or lower) at all.
Solution	• Shades cannot be forced into tight inside mount window openings. If an inside mount, check that the shade is installed correctly. Make sure there is clearance between the ends of the shade and the window casement. • Check that the installation brackets are level. Shim to level, if necessary. • If hold-down brackets are used, make sure they have been released. • Make sure the fabric is not caught.
Problem	My shades are uneven when raising or lowering, or the bottom rail is uneven when still.
Solution	• Check that the installation brackets are level. Shim to level, if necessary. • Check that the window is square by measuring the diagonals.
Problem	When I try to open or close my cord loop shade, the cord feels stuck or hard to pull.
Solution	• Check that the cord tensioner is mounted properly. Reinstall, if necessary. Refer to the Universal Cord Tensioner Installation Instructions.

CHILD SAFETY

⚠WARNING ⚠ADVERTENCIA

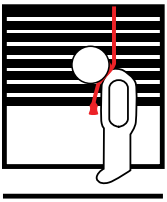

Window Blind Cord Strangulation Risk

Window blinds with a damaged or loose tension device or retractable cord that fails to fully retract pose a strangulation risk to children. To avoid this potential strangulation risk, consider purchasing cordless products or products with inaccessible cords.

Riesgo de Estrangulamiento en Cuerdas de Persianas

Las persianas con un dispositivo tensor suelto o dañado o con una cuerda retráctable que no se ajusta completamente representan un riesgo de estrangulación para los niños. Para evitar un posible riesgo de estrangulamiento, considere comprar productos inalámbricos o productos con cuerdas inaccesibles.