LEVOLOR

HOW TO INSTALL ROLLER SHADES

CASSETTE VALANCE


CORDLESS LIFT | CORD LOOP | MOTORIZED

Read all instructions before starting installation.

See installation video for additional support.

Scan for Installation Instructions in Spanish


PARTS INCLUDED (Quantity varies by order)



Mounting Bracket(s)





Screws

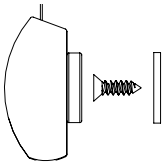


Hold Down Bracket(s)


TOOLS NEEDED





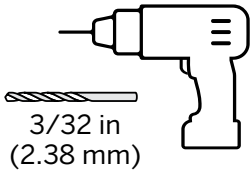


3/32 in
(2.38 mm)



1 PLACE SHADE IN DESIRED LOCATION AND MARK FRONT EDGE


IMPORTANT: Make sure the mounting surface is level. Brackets must be aligned and level for shade to operate properly. Shim brackets if necessary.

INSIDE MOUNT

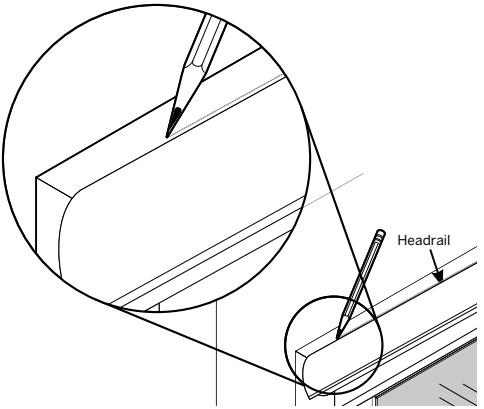

Minimum Depth	Fully Recessed	
1-1/2"	Medium Cassette	3-3/4"
	Large Cassette	4-3/8"

OUTSIDE MOUNT

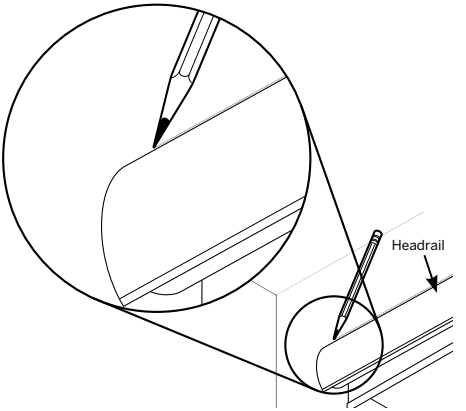


Minimum Height	
Medium Cassette	3-1/8"
Large Cassette	4"


2 MEASURE 2-1/2" IN FROM SHADE EDGE ON BOTH ENDS AND MARK

DON'T FORGET: Before marking bracket locations, check clearance depth required to avoid obstructions such as window cranks or handles.

INSIDE MOUNT

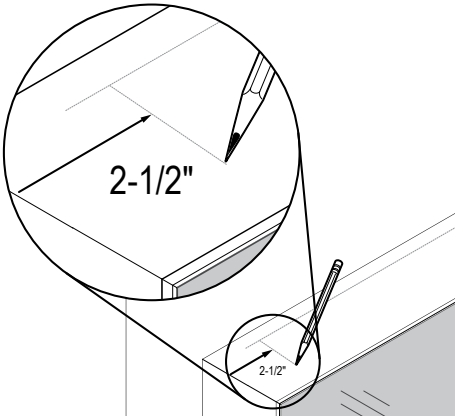


OUTSIDE MOUNT

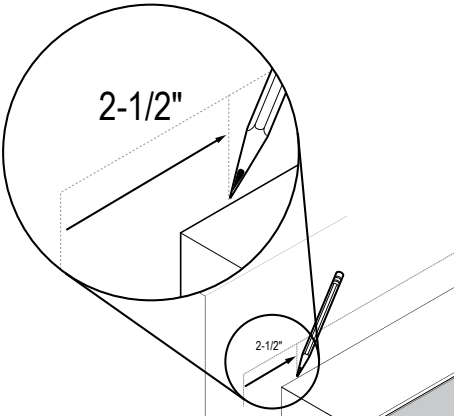


3 MARK BRACKET LOCATION, CENTER ANY ADDITIONAL BACKETS IF APPLICABLE

INSIDE MOUNT

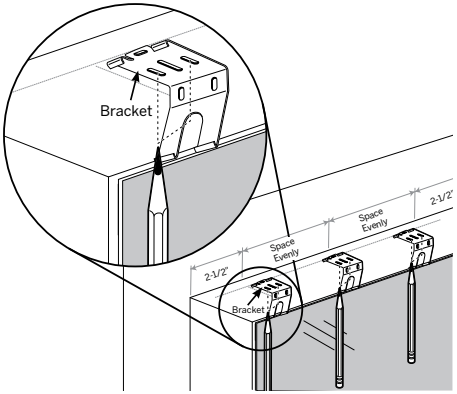


OUTSIDE MOUNT

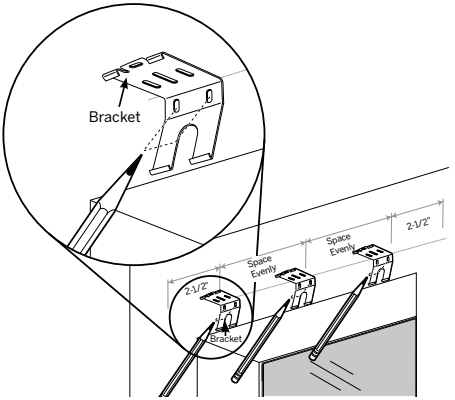


4 PRE-DRILL HOLES USING A 3/32" DRILL BIT

INSIDE MOUNT

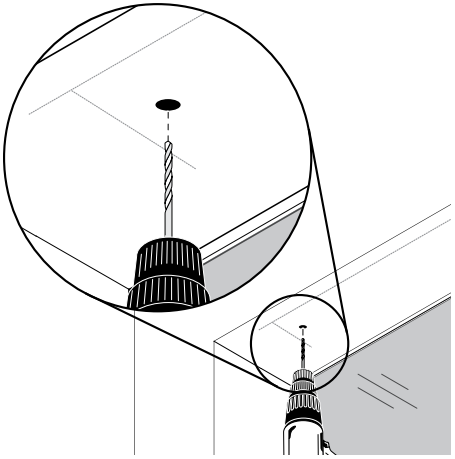


OUTSIDE MOUNT

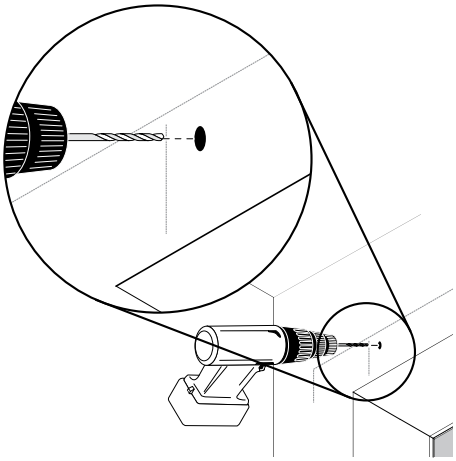


5 INSTALL MOUNTING BRACKETS USING SUPPLIED SCREWS

INSIDE MOUNT

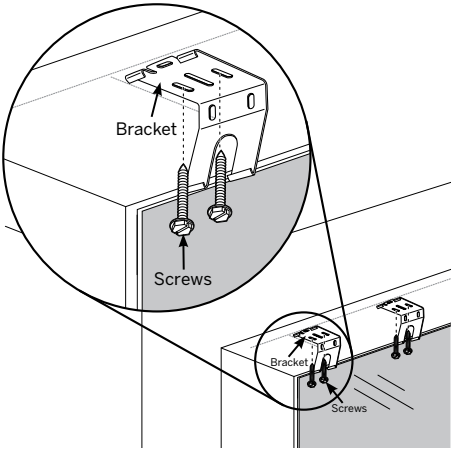

OUTSIDE MOUNT

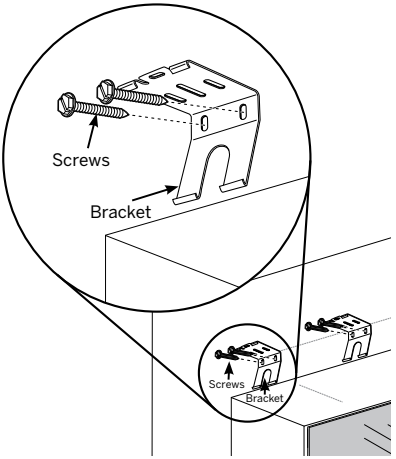

CAUTION: Use drywall anchors (not provided) when mounting into drywall. Failure to properly anchor shade could cause shade to fall possibly resulting in injury.

6 INSTALL THE SHADE

PRIOR TO MOUNTING SHADE

Motorized: pair shade prior to mounting. Refer to programming guide included with remote or scan below. Pairing takes under 1 minute.


InMotion Wand: Refer to the programming guide included with the wand for operation, or scan below.

Scan for Motorization Remote Pairing Guide

Scan for InMotion Wand Programming Guide


IMPORTANT: Do not remove lock pin until the shade is installed. Please see Step 8.

With the front of the shade facing you, rotate the headrail upward until the front edge of the headrail engages with the bracket. Push gently until you hear a click. This confirms the shade is locked into place.

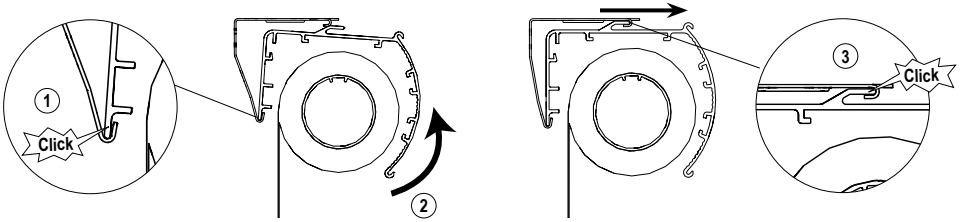


REMOVAL OF SHADE (ONLY IF NECESSARY)

- Place a flat-head screwdriver between the shade's top rail and the mounting bracket.
- Gently twist the screwdriver until you hear or feel the snap that releases the shade from the bracket.
- Once released, carefully tilt the top of the shade forward and down.
- Lift the shade out of the brackets.

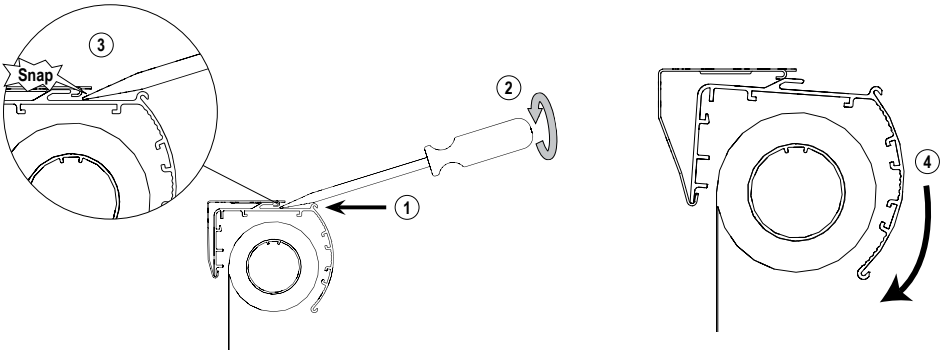

7 FOR CONTINUOUS LOOP ONLY

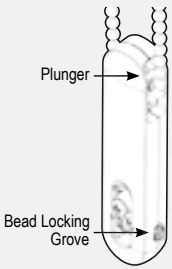

Refer to the installation instructions included with the Beaded Cord Tensioner.


For the shade to operate properly, the tensioner must be correctly mounted and secured.

Scan for Bead Chain Loop Universal Cord Tensioner Instructions

OPTIONAL – ATTACH THE HOLD-DOWN BRACKETS

Hold-down brackets prevent shades from swaying.


- Lower the shade to align the magnet with the location for the catch.
- Once the location has been identified, mark the position of the catch onto the wall by pressing the screw into the wall.
- Raise the shade and install the catch plate to the marking made and with the screw provided.
- When shades are fully lowered and the bottom rail is attached to either hold down brackets, detach the bottom rail from the catch plate before raising the shade.

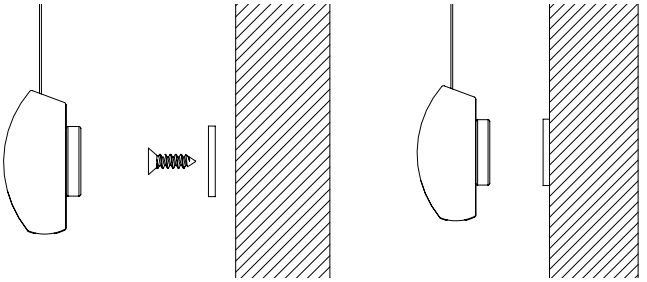

IMPORTANT: The magnets will be pre-installed onto the bottom rail. The round catch plate will be provided.

8 TENSION ADJUSTMENT

If needed, with the shade installed and the wheel facing inside the room, turn the wheel to fine-tune the balance and tension of the shade.

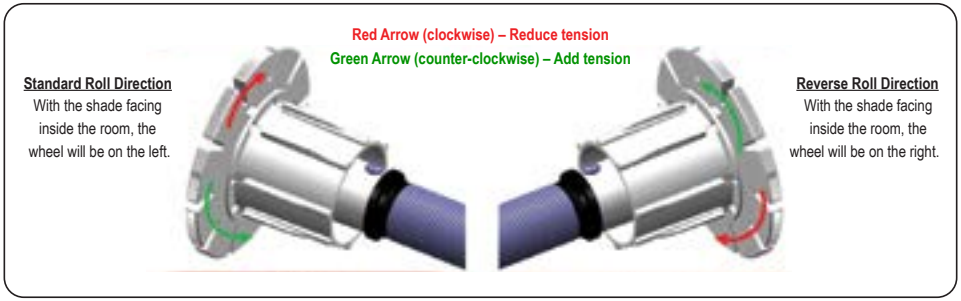


TROUBLESHOOTING

Problem	My shade won't snap into the installation brackets.
Solution	Ensure installation brackets are aligned and level. Shim the brackets if necessary to achieve a level alignment.
Problem	My shade is difficult to raise (or lower), or will not raise (or lower) at all.
Solution	• Shades cannot be forced into tight inside mount window openings. If an inside mount, check that the shade is installed correctly. Make sure there is clearance between the ends of the shade and the window casement. • Check that the installation brackets are level. Shim to level, if necessary. • If hold-down brackets are used, make sure they have been released. • Make sure the fabric is not caught.
Problem	My shades are uneven when raising or lowering, or the bottom rail is uneven when still.
Solution	• Check that the installation brackets are level. Shim to level, if necessary. • Check that the window is square by measuring the diagonals.
Problem	When I try to open or close my cord loop shade, the cord feels stuck or hard to pull.
Solution	• Check that the cord tensioner is mounted properly. Reinstall, if necessary. Refer to the Universal Cord Tensioner Installation Instructions.

CHILD SAFETY

⚠WARNING ⚠ADVERTENCIA

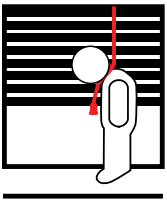

Window Blind Cord Strangulation Risk

Window blinds with a damaged or loose tension device or retractable cord that fails to fully retract pose a strangulation risk to children. To avoid this potential strangulation risk, consider purchasing cordless products or products with inaccessible cords.

Riesgo de Estrangulamiento en Cuerdas de Persianas

Las persianas con un dispositivo tensor suelto o dañado o con una cuerda retráctable que no se ajusta completamente representan un riesgo de estrangulación para los niños. Para evitar un posible riesgo de estrangulamiento, considere comprar productos inalámbricos o productos con cuerdas inaccesibles.