LEVOLOR

HOW TO INSTALL ROLLER SHADES

OPEN ROLL SHADES - OPTIONAL FABRIC VALANCE
CORD LOOP | MOTORIZED

Read all instructions before starting installation.

Scan for Installation Instructions in Spanish


PARTS INCLUDED (Quantity varies by order)




Mounting Bracket(s)



Screws




End Caps

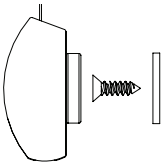

Hold Down Bracket(s)


OPTIONAL VALANCE

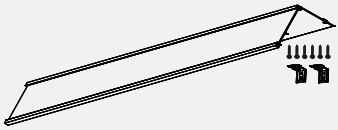



Valance Kit
(See Page 2 for Installation Instructions)

NOTE: Valances are optional. They are only included if specifically selected during your order. If your package does not include a valance, installation can proceed without them.


TOOLS NEEDED





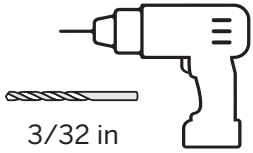


3/32 in
(2.38 mm)



IF YOU ORDERED OPTIONAL FABRIC VALANCE


INSIDE MOUNT

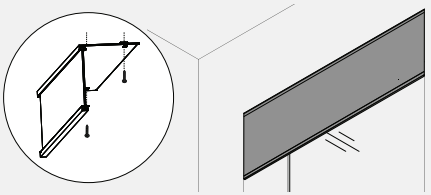

Flush Mount Depth Requirement: 3-1/8"
Minimum Mounting Depth Requirement: 1-1/4"

- Install the valance first, then proceed with shade installation.
- Valance can be mounted directly into the top of the window frame.
- Drill vertically through the pre-drilled slots.

OUTSIDE MOUNT

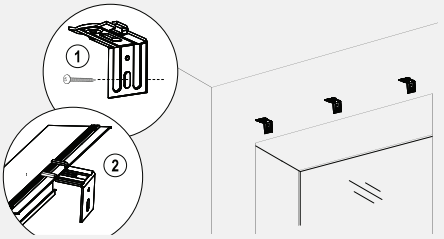

Minimum Mounting Height: 2"

- Install brackets level and aligned to each other, using the screws provided.
- Slide valance under the clips that are on the top of the installation brackets.


1 PLACE SHADE IN DESIRED LOCATION AND MARK FRONT EDGE

DON'T FORGET: Before marking bracket locations, check clearance depth required to avoid obstructions such as window cranks or handles.

For the shade to operate correctly, it's important that the brackets are mounted level.


If needed, use shims to help adjust and align the brackets.

INSIDE MOUNT

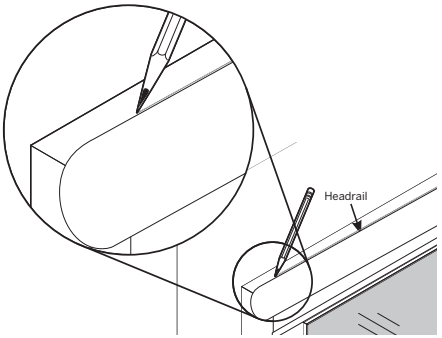

Minimum Depth
1-3/8"
Flush Mount Depth
2-1/8" to 4" (Depends on roll size)


OUTSIDE MOUNT

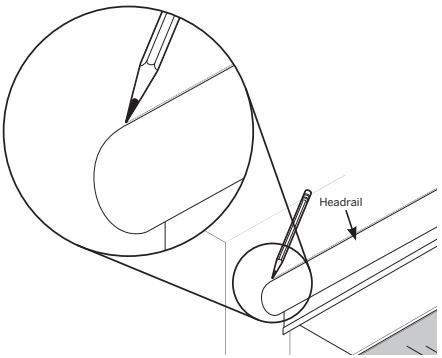


Minimum Height
1-3/4"

2 MARK BRACKET LOCATION

INSIDE MOUNT

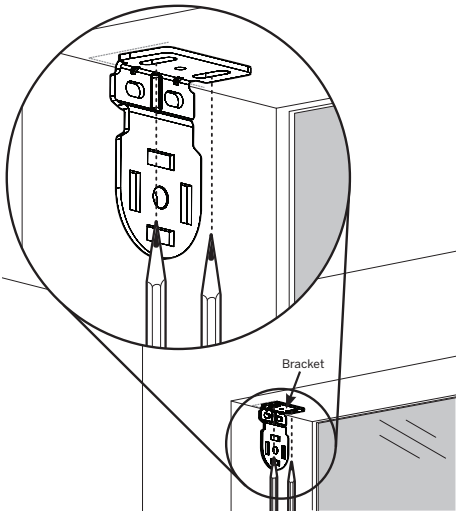


OUTSIDE MOUNT

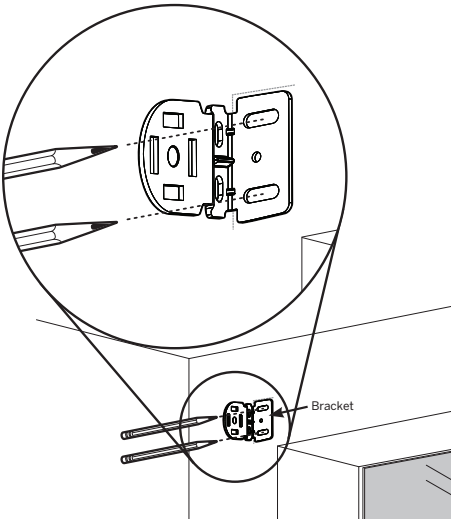


3 PRE-DRILL HOLES USING A 3/32" DRILL BIT

INSIDE MOUNT

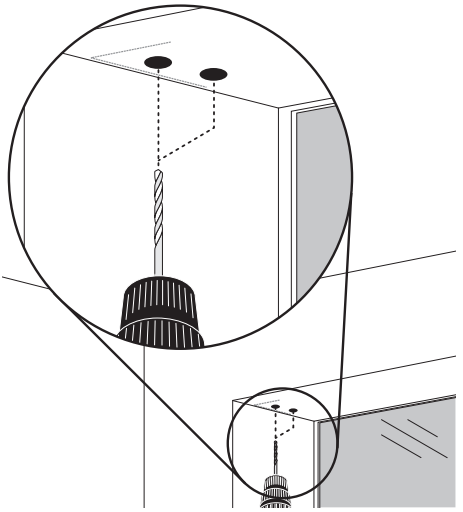


OUTSIDE MOUNT

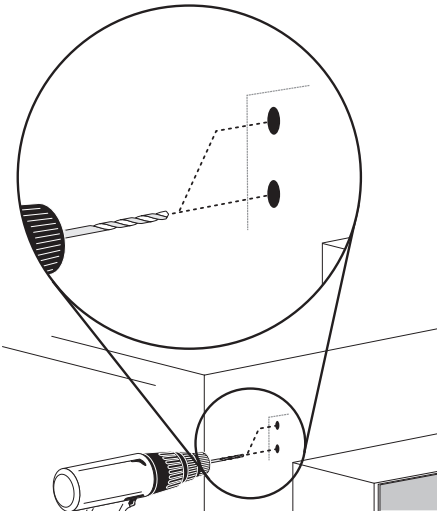


4 INSTALL MOUNTING BRACKETS USING SUPPLIED SCREWS

INSIDE MOUNT

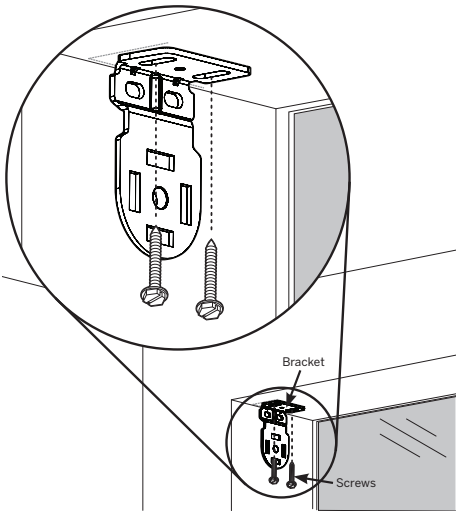


OUTSIDE MOUNT

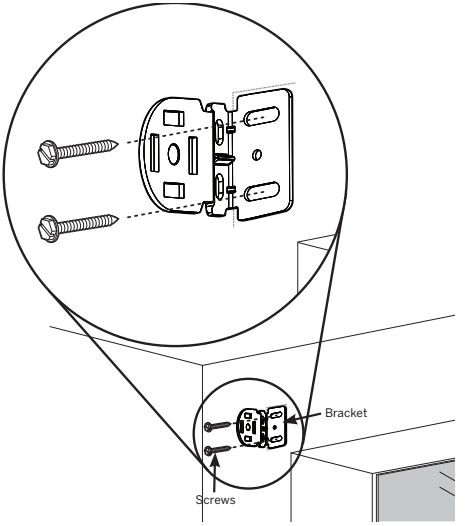

CAUTION: Use drywall anchors (not provided) when mounting into drywall. Failure to properly anchor shade could cause shade to fall possibly resulting in injury.

5 MOUNT THE SHADE INTO THE BRACKETS

MOUNTING WITH CONTINUOUS LOOP CONTROL

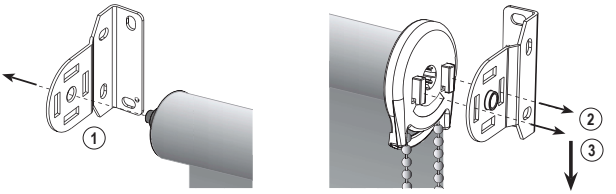

- Place the spring loaded pin end into the round hole of the bracket.
- Keeping the pin end secure in its bracket, insert the hooks on the clutch straight into the two slots in the bracket.
- Once the two hooks are through the slots, gently pull downward on the hook side until the hooks have locked securely onto the bracket.
- The bottom of the clutch with chain loop should point straight down.

MOUNTING WITH MOTORIZATION


Motorized: Refer to programming guide included with remote or scan below.

InMotion Wand: Refer to the programming guide included with wand or scan below.

Scan for Motorization Remote Pairing Guide


Scan for InMotion Wand Programming Guide

INSTALLATION

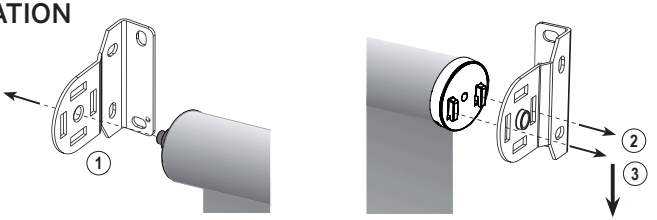


- Place the spring loaded pin end into the round hole of the bracket.
- Keeping the pin end secure in its bracket, insert the hooks on the motor head straight into the two slots in the bracket.
- Once the two hooks are through the slots, gently pull downward on the motor until the hooks have locked securely to the bracket.
- The reset button of the motor should be facing down.

6 INSTALL THE END CAPS

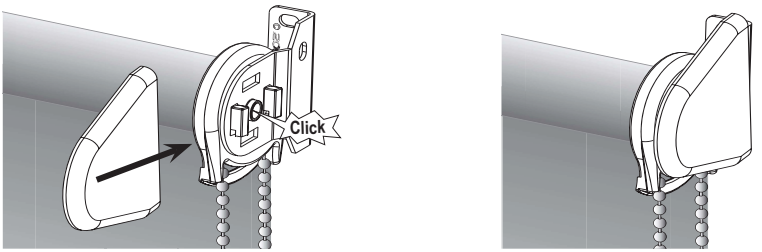

7 FOR CONTINUOUS LOOP ONLY



Refer to the installation instructions included with the Beaded Cord Tensioner.


For the shade to operate properly, the tensioner must be correctly mounted and secured.

Scan for Bead Chain Loop Universal Cord Tensioner Instructions

OPTIONAL – ATTACH THE HOLD-DOWN BRACKETS

Hold-down brackets prevent shades from swaying.


- Lower the shade to align the magnet with the location for the catch.
- Once the location has been identified, mark the position of the catch onto the wall by pressing the screw into the wall.
- Raise the shade and install the catch plate to the marking made and with the screw provided.
- When shades are fully lowered and the bottom rail is attached to either hold down brackets, detach the bottom rail from the brackets/catches before raising the shade.

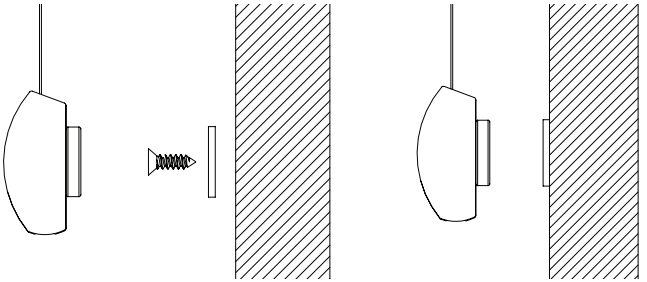

IMPORTANT: The magnets will be pre-installed onto the bottom rail. The round catch plate will be provided.

REMOVING THE SHADE (ONLY IF NECESSARY — CONTINUOUS LOOP CONTROL, MOTORIZATION, OPEN ROLL TUBES)

OPEN ROLL TUBES

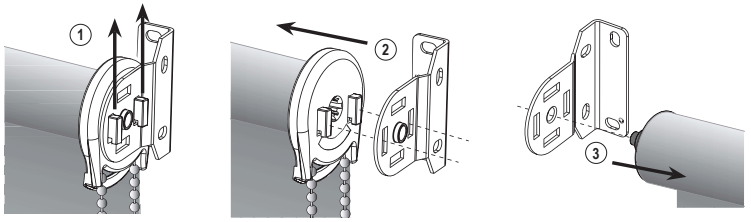

- Raise the shade.
- To disengage, gently lift up the control side (hook end) until the hooks touch the top part of the bracket slot.
- Slide the roll towards the idler pin end until the hooks are completely out of the bracket slots.
- Remove the spring loaded pin end from the Idler bracket.

TROUBLESHOOTING

Problem	My shade won't snap into the installation brackets.
Solution	Ensure installation brackets are aligned and level. Shim the brackets if necessary to achieve a level alignment.
Problem	My shade is difficult to raise (or lower), or will not raise (or lower) at all.
Solution	• Shades cannot be forced into tight inside mount window openings. If an inside mount, check that the shade is installed correctly. Make sure there is clearance between the ends of the shade and the window casement. • Check that the installation brackets are level. Shim to level, if necessary. • If hold-down brackets are used, make sure they have been released. • Make sure the fabric is not caught.
Problem	My shades are uneven when raising or lowering, or the bottom rail is uneven when still.
Solution	• Check that the installation brackets are level. Shim to level, if necessary. • Check that the window is square by measuring the diagonals.
Problem	When I try to open or close my cord loop shade, the cord feels stuck or hard to pull.
Solution	• Check that the cord tensioner is mounted properly. Reinstall, if necessary. Refer to the Universal Cord Tensioner Installation Instructions.

IMPORTANT INFORMATION


- Daily operation of shade will ensure that it performs at its optimal level.
- If the shade is in the lowered position for an extended period of time, extra care needs to be taken when raising the shade. The fabric will relax and may resist lifting. This is a natural occurrence with all fabric shades. When lifting, you may notice the billowing (falling out) toward you. This is temporary and can be corrected by slowly raising the shade completely and then operating several times. This allows the shade to operate as designed.
- Motorized Shades – see operating instructions guide included with shade/remote control.

CHILD SAFETY

Young children can STRANGLE in cord loops and in the loop above the cord stop.
They can also wrap cords around their necks and STRANGLE.

- **Always keep cords out of children's reach.**
- **Move cribs, playpens and other furniture away from cords. Children can climb furniture to get to cords.**
- **Do not tie cords together.**
- **Make sure cords do not twist together and create a loop.**

⚠ WARNING ⚠ ADVERTENCIA

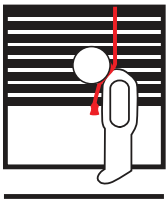

Window Blind Cord Strangulation Risk

Window blinds with a damaged or loose tension device or retractable cord that fails to fully retract pose a strangulation risk to children. To avoid this potential strangulation risk, consider purchasing cordless products or products with inaccessible cords.

Riesgo de Estrangulamiento en Cuerdas de Persianas

Las persianas con un dispositivo tensor suelto o dañado o con una cuerda retráctable que no se ajusta completamente representan un riesgo de estrangulación para los niños. Para evitar un posible riesgo de estrangulamiento, considere comprar productos inalámbricos o productos con cuerdas inaccesibles.