
LEVOLOR

HOW TO INSTALL CLASSIC VALUE FAUX WOOD BLINDS


CORDLESS LIFT

Read all instructions before starting installation.

PARTS INCLUDED (Quantity varies by order)

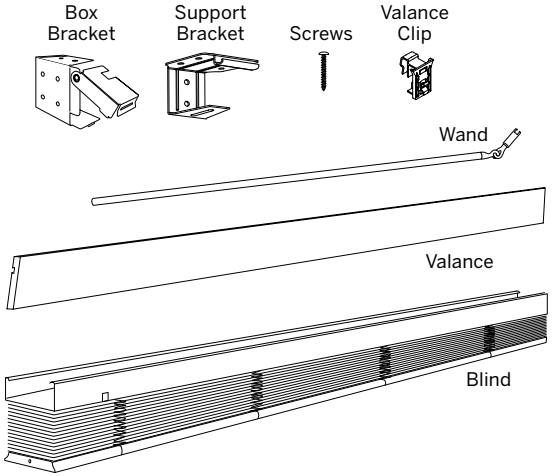


OPTIONAL PARTS

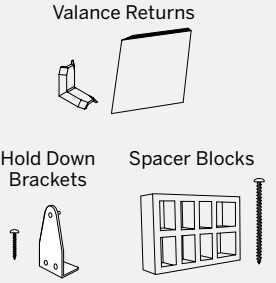

NOTE: Optional items will be included, if selected at time of the blind order. If your package does not include these items, installation can proceed without them.

TOOLS NEEDED

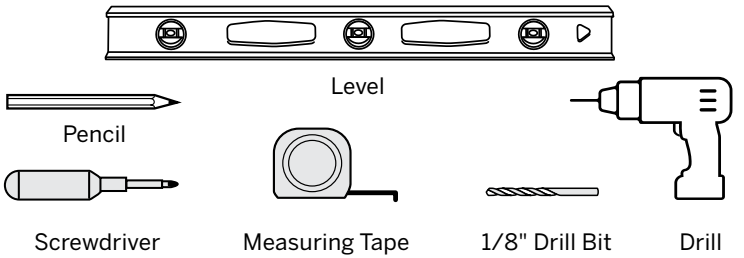

Use the appropriate fasteners for the type of mounting surface as specified below:

- **Drywall or Plaster:** Use wall anchors or expansion bolts (not provided).
- **Metal:** Use sheet metal screws (not provided).
- **Wood:** Use No. 6 hex head screws (provided).

BRACKET INFORMATION


- Your order will include the correct number of installation brackets for your blind width, as shown in the table.
- For the blind to operate correctly, it's important that the brackets are mounted level.
- If needed, use shims to help adjust and align the brackets.
- The number and placement of brackets is the same whether you're installing inside or outside the window frame.

Blind Width	Bracket Quantities	
	End Brackets	Support Brackets
Up to 48"	2	0
48" to 84"	2	1
84" to 96"	2	2

1 PLACE BLIND IN DESIRED LOCATION AND MARK EDGES


DON'T FORGET: Before marking bracket locations, check clearance depth required to avoid obstructions such as window cranks or handles.

INSIDE MOUNT

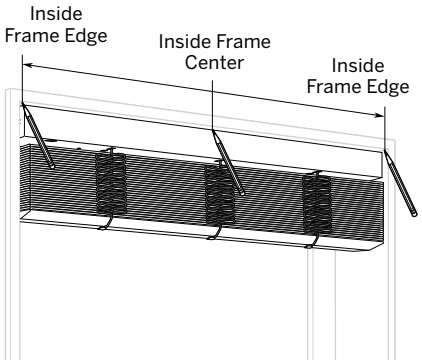

	Minimum Depth	Flush Headrail	Flush Valance
2" Slat	3/4"	2-1/2"	3-1/2"

OUTSIDE MOUNT

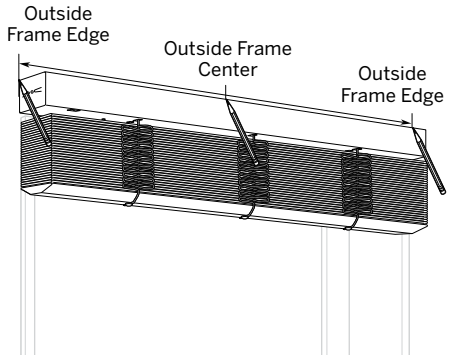


Minimum Height
3"

2 MARK BRACKET LOCATION, CENTER ANY ADDITIONAL BRACKETS IF APPLICABLE

- Position the box brackets at the end of each headrail to confirm the dimension.
- Mark the location of the desired bracket mounting holes, two per bracket, making sure they are square and equally spaced.


INSIDE MOUNT

NOTE: Box brackets on inside mount can be marked for top, back or side attachment.

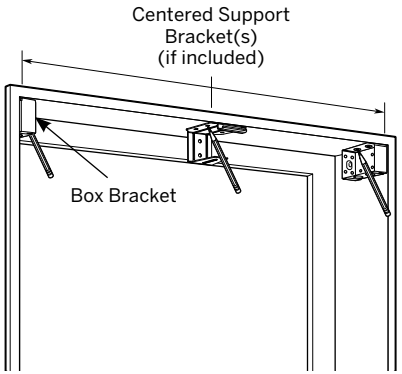


OUTSIDE MOUNT

NOTE: Box brackets on outside mount can only be marked for back attachment.

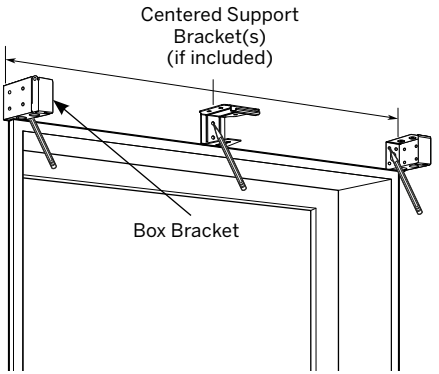


3 PRE-DRILL HOLES USING A 1/8" DRILL BIT

INSIDE MOUNT

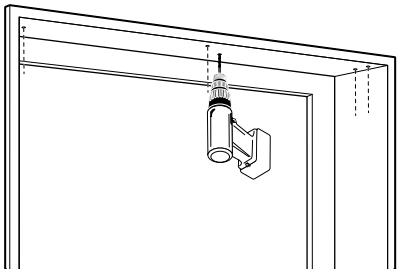

OUTSIDE MOUNT

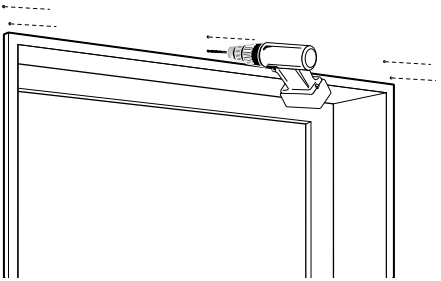


4 INSTALL MOUNTING BRACKETS USING SUPPLIED SCREWS


IMPORTANT: Use the same holes for all brackets to ensure even projection from the surface.

- While holding the brackets in place, secure the brackets using two screws per bracket.


INSIDE MOUNT

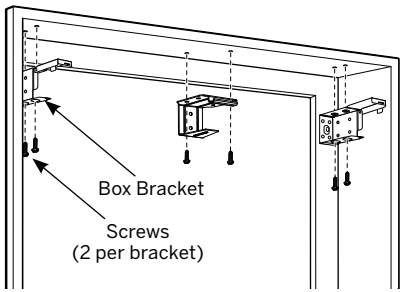

OR

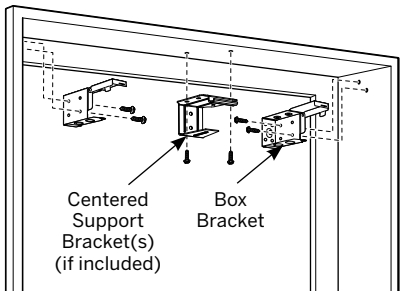

OUTSIDE MOUNT

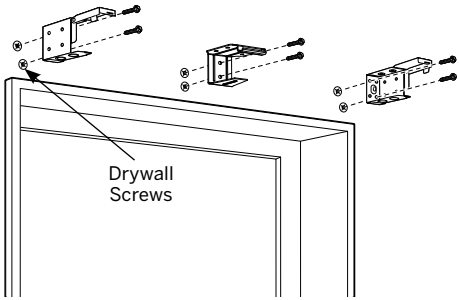


CAUTION: Use drywall anchors (not provided) on outside mounts into drywall. Failure to properly anchor shade could cause shade to fall possibly resulting in injury.

IF YOU ORDERED OPTIONAL SPACER BLOCKS


OPTIONAL SPACER BLOCK OUTSIDE MOUNT


- Outside mounting spacer blocks will provide an additional 3/8" clearance.
- If spacers are used, longer screws may be required to ensure a secure installation (not provided).

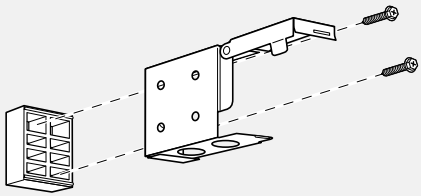

CAUTION: Do not use more than one spacer block. Using more than one spacer block could cause blind to fall resulting in possible injury.

5 INSERT WAND

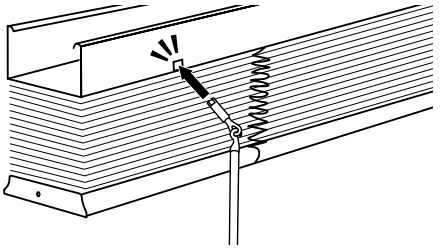


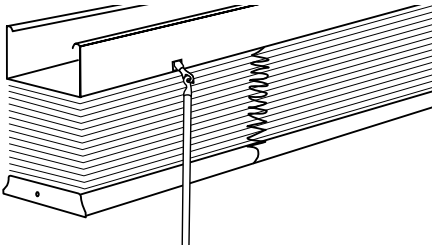



6 INSTALL VALANCE (OPTIONAL)

IMPORTANT: Valance Clips are vertically adjustable. Final position can be set after installation is complete.

ATTACH VALANCE RETURNS




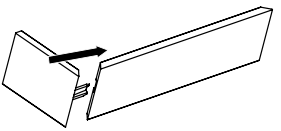

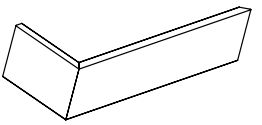


ASSEMBLE VALANCE CLIPS


- Valance clips may come in two pieces. Slide pieces together before attaching to valance.

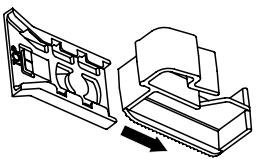

ATTACH VALANCE

- Evenly space valance clips on backside of the valance.
- For Inside Mount, attach valance before installation. For Outside Mount, attach valance after blind installation.

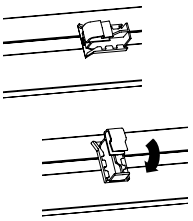

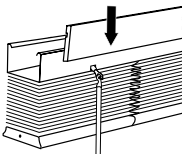


7 MOUNT BLIND INTO THE BRACKETS

- Align the headrail with the brackets, tilt mechanism facing out.
- Slide the headrail straight back into the brackets.
- If the headrail can slide from side to side in the box brackets, use a flat-head screwdriver to bend out the tabs on the ends of the headrail until it is snug.
- If center support bracket(s) are included, hook the front edge of the headrail into the bracket.
- Once blinds are in place, lower the front of each box bracket and press until the locking tab clicks.

CAUTION: Be sure the bracket and headrail are properly secured before operating the blind. Failure to do so may result in the blind falling and possible injury.

INSIDE MOUNT


OUTSIDE MOUNT

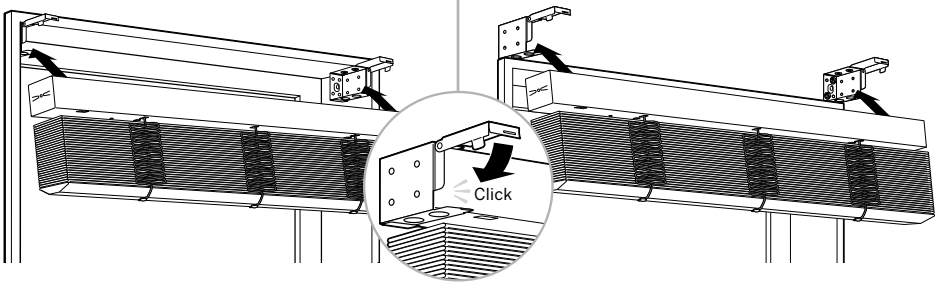


HOLD-DOWN BRACKETS (OPTIONAL)

- Ideal for doors, hold-down brackets prevent blind from swaying. Assemble as shown to each side of bottom rail.

INSIDE MOUNT

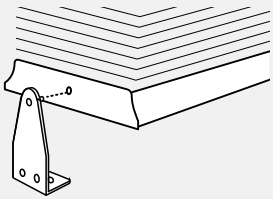

OUTSIDE MOUNT

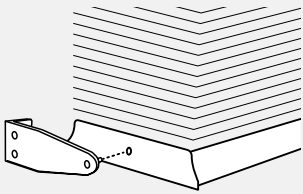

OPERATION


RAISE AND LOWER SHADE


Cordless Lift

Raise and lower the shade by holding the handle in the center portion of the bottomrail to ensure level movement.


REMOVING THE BLIND

- First make sure that the blind is fully raised. Unlock and lift the front clips of each end box bracket and slide the headrail out of the brackets. If center support brackets are used, lift the front of the headrail up to clear the channel of the bracket and slide out forward.

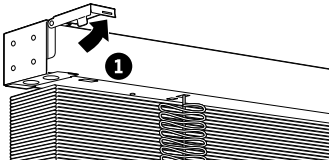

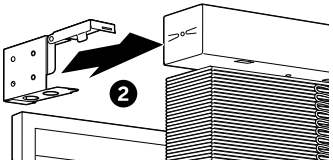

⚠ WARNING ⚠ ADVERTENCIA

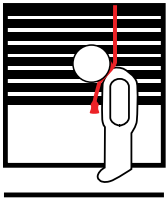

Window Blind Cord Strangulation Risk

Window blinds with a damaged or loose tension device or retractable cord that fails to fully retract pose a strangulation risk to children. To avoid this potential strangulation risk, consider purchasing cordless products or products with inaccessible cords.

Riesgo de Estrangulamiento en Cuerdas de Persianas

Las persianas con un dispositivo tensor suelto o dañado o con una cuerda retráctable que no se ajusta completamente representan un riesgo de estrangulación para los niños. Para evitar un posible riesgo de estrangulamiento, considere comprar productos inalámbricos o productos con cuerdas inaccesibles.