
LEVOLOR

HOW TO ADJUST DAY / NIGHT SHADE INTERMEDIATE RAIL


DAY/NIGHT INTERMEDIATE (MIDDLE) RAIL ADJUSTMENT

The intermediate (middle) rail is adjusted using the skew adjusters that can be found on either side of the rail.

RIGHT SIDE

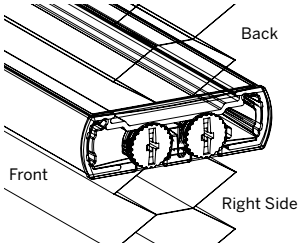

LEFT SIDE

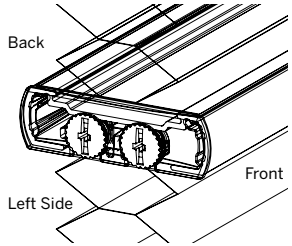

Lift intermediate (middle) rail on side to be adjusted. This will take the weight off the cord.

Use a screwdriver or dime to:

- Turn screw clockwise to lift that side of the rail.
- Turn screw counterclockwise to lower that side of the rail.
- Half a revolution is 1/4" adjustment (maximum adjustment is 1/2").

Your shade may have two, three or four cords. Cord Count is determined by your unique shade dimensions.

Getting your Cord Count

Look through the top portion of your shade where the sheer material is. Find the thin vertical lines visible through the sheer fabric. These lines are the cords—count each one to determine how many your shade has. Adjust based on cord count below:

- **Two Cords:** Front Adjusters on either the Left or Right endcap.
- **Three Cords:** Both Adjusters on the Left endcap, Front Adjuster on the Right endcap.

NOTE: If the Front left skew adjuster is used to take up or let down the middle rail, the back adjuster should be turned in a similar manner to take up any slack in the middle cord.

- **Four Cords:** Both Adjusters on both endcaps can be used.

NOTE: Once leveled using the front adjusters, the back adjusters on both sides should be turned to take up the slack in the middle cords.

Scan for Installation Instructions in Spanish