

CUSTOM

Panel Track Shades

LEVOLOR®

TECHNICAL GUIDE

Table of Contents

Overview

How to Place an Order 3
How to Measure 4

Product Guide

Critical Dimensions 5–6
Options and Upgrades 7-9
Cleaning Guide 10
Terms & Conditions 11

How to Place an Order

1 CHOOSE YOUR
Fabric Style
Select from a variety of beautiful textures and colors.


2 CHOOSE YOUR
Light Control
Select from light filtering, room darkening, blockout, and solar fabrics.

3 CHOOSE YOUR
Options
Determine your control syle, and finishing details.

How to Measure

NOTE: Smallest unit of measure is 1/8".
Blinds installed on windows near wall or baseboard heaters must clear the heaters by 12" above and 6" to the side.


INSIDE MOUNT (IM) INSTALLATION

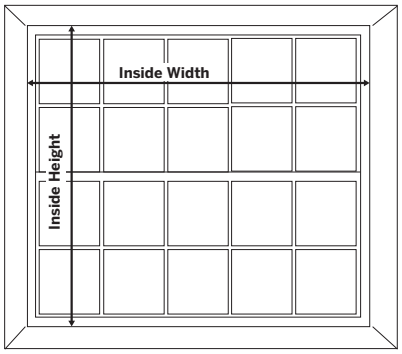

TO FIND WIDTH
Measure the opening across the top, where the headrail is to be installed, from inside of window frame on left to inside of window frame on right. Round the measurement down to the nearest 1/8". For minimum installation depth requirements, refer to Headrail Dimensions Chart on page 5.

TO FIND HEIGHT
Measure from the inside top of the opening on the left, at the center, and on the right to the sill; round the measurement down to the nearest 1/8" and note the smallest dimension. Do not make any allowances: the factory will make all adjustments so the headrail will fit the opening properly.


OUTSIDE MOUNT (OM) INSTALLATION—WINDOWS

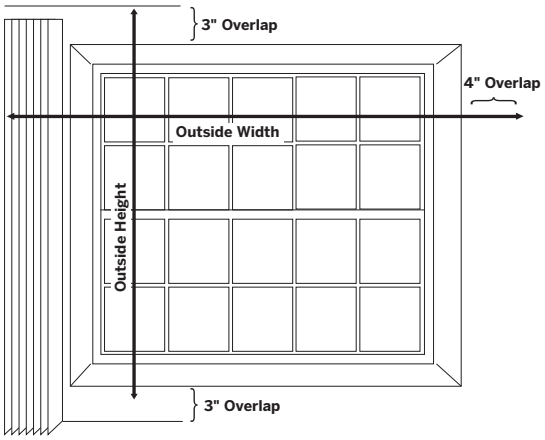

TO FIND WIDTH
Measure the width of the area to be covered at the place where the headrail will be installed to the nearest 1/8". Shade should overlap opening at least 4" on each side to ensure privacy.

TO FIND HEIGHT
Measure the height of the area to be covered and round down to the nearest 1/8." Shade should extend at least 3" above and 3" below opening or window frame. For installations to the floor, make adequate allowance for carpeting. Specifying OM measurement means the factory makes no allowances.

OUTSIDE MOUNT (OM) INSTALLATION—PATIO DOORS

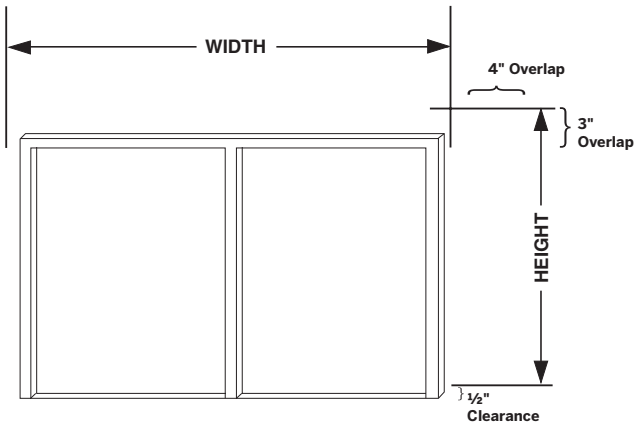

TO FIND WIDTH
Measure the width of the area to be covered at the place where the headrail will be installed to the nearest 1/8." Shade should overlap opening at least 4" on each side to ensure privacy.

TO FIND HEIGHT
Measure the height of the area to be covered and round down to the nearest 1/8." Shade should extend at least 3" above opening or window frame. For installations to the floor, deduct 1/2" for proper clearance. Specifying OM measurement means the factory makes no allowances.

EXTENSION BRACKETS—EXTENDS FROM 2" TO 4"
Recommended for outside mount only when an obstruction protrudes beyond the window, such as window cranks and other mechanisms. Extension brackets are adjustable. Must request at time of order.

Critical Dimensions

Specifications and Deductions

	Width		Height		Tolerances	
Specifications	Minimum	Maximum	Minimum	Maximum	Width	Length
One-Way Draw	48"	150 1/2"	12"	144"	1/16"	1/8"
Split Draw	69 1/2"	192"	12"	144"	1/16"	1/8"

Deductions	Width	Panel Length
Inside Mount	1/4"	1 1/2"
Outside Mount	0"	1"

Wand

Wand length may NOT be changed from below assignment.

CONTROL LENGTH

Shade Height	Cordless Wand Length
12"–24"	12"
24 1/8"–36"	20"
36 1/8"–96"	33"
96 1/8"–108"	47"
108 1/8"–120"	59"
120 1/8"–132"	69"
132 1/8"–144"	80"

Headrail Dimensions

Reference the Configuration Chart to determine the number of channels on your shade.

	2 Channel	3 Channel	4 Channel	5 Channel
Height	1/2"	1/2"	1/2"	1/2"
Depth	1 1/2"	2 1/4"	3"	3 3/4"

Critical Dimensions

Panel Quantity and Configuration Chart

Based on the width of your shade and the type of draw you choose for your Panel Track Shade (One-Way or Split-Draw), use the corresponding chart to determine the number of panels in your shade, the width of each panel and the number of channels in the headrail. Overlap between panels will vary from 2½" to 6½" depending on the width of your shade. There will be equal panel overlap throughout each shade.

ONE-WAY DRAW (48"–150 1/2")

Shade Width	No. of Panels	Panel Width	No. of Channels on Headrail	Panel Configuration of Headrail*
52"	2	27	2	
53 7/8"	2	29	2	
58 7/8"	3	22	3	
67 7/8"	3	24	3	
75 3/8"	3	27	3	
81 3/8"	4	22	4	
83 7/8"	4	24	4	
100 3/8"	5	22	5	
109 3/8"	5	24	5	
125 3/4"	5	27	5	
134 1/4"	5	29	5	
150 1/2"	5	32	5	

*One-Way Shades may be ordered to draw left or right. The diagrams above depict a left-draw shade. The configuration is the reverse for a right-draw shade.


SPLIT DRAW (69 1/2"–192)

Shade Width	No. of Panels	Panel Width	No. of Channels on Headrail	Panel Configuration of Headrail**
69 1/2"	4	22	2	
77 3/8"	4	22	2	
83 7/8"	4	24	2	
89 3/8"	4	24	3	
101 3/8"	4	27	3	
107 3/8"	4	29	3	
120 1/4"	6	22	4	
130 3/8"	6	24	4	
143 3/8"	6	27	4	
156 3/8"	6	29	4	
159 3/8"	8	22	5	
170 3/8"	8	24	5	
192 "	8	27	5	


**The gray panels indicate where the split will occur.

Options & Upgrades

DECORATIVE DETAILS Select your finishing options

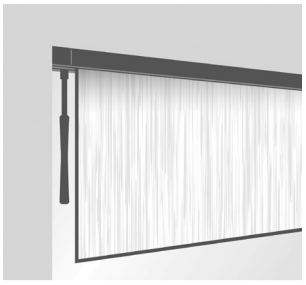


No Valance
Standard option.

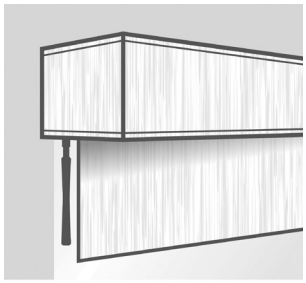


Decorative Valance*
Coordinated fabric insert for a more finished look.

* Not available on all collections.

DRAW STYLE Select your control and stacking orientations

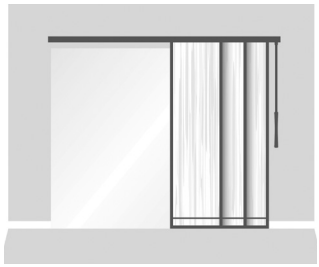


One Way Stack
Controls and panel stack on same side, left or right.

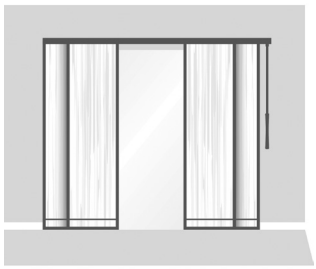

Split Draw
Panels open from center and stack evenly on both sides; controls left or right.

CONTROL STYLE

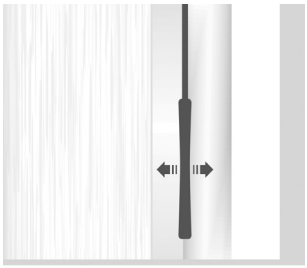

Cordless Wand
Provides a clean look and improved safety for homes with young children or pets.

Wands come in one of 5 finishes pre-selected to best coordinate with your chosen shade color.

Options & Upgrades

WAND COORDINATION

There are five wand colors (white, off white, bronze, satin nickel, and black) comprised of the shaft and the handle. The top half of the circle represents the shaft color, and the bottom half represents the handle color.)



White | Off White | Bronze | Satin Nickel | Black

Collection: **Bamboo Essence**

FABRIC	OE KEY	WAND COLOR
Origami	10481961	Bronze
Tatami	10481959	Bronze
Shibori	10481960	Bronze

Collection: **Bay Weave**

FABRIC	OE KEY	WAND COLOR
Gray	10481914	Satin Nickel
White	104NW004	White

Collection: **Boulce Stripe**

FABRIC	OE KEY	WAND COLOR
Brown	10433367	Off White

Collection: **Contemporary Blockout**

FABRIC	OE KEY	WAND COLOR
Cement	10433350	Bronze
Ivory	10433348	Off White
Pepper	10433346	Black
Off White	10433351	White
Black	10433347	Black
Navy	104BL003	Off White

Collection: **Designer Textures LF**

FABRIC	OE KEY	WAND COLOR
Whisper	11470200	White
Light Gray	11470343	Satin Nickel
Graphite	11470345	Satin Nickel
Candlelight	11470204	Off White

Collection: **Designer Textures RD**

FABRIC	OE KEY	WAND COLOR
Whisper	12470200	White
Light Gray	12470343	Satin Nickel
Graphite	12470345	Satin Nickel
Candlelight	12470204	Off White

Collection: **Engraved**

FABRIC	OE KEY	WAND COLOR
Whisper	10433329	Off White
Light Gray	10433328	Off White
Sand	10433327	Off White
Summer Sky	104BL002	White

Collection: **Fala Pango**

FABRIC	OE KEY	WAND COLOR
Kenya	104ST011	Bronze
Storm Cloud	104GY013	White
Doe	104BE003	Off White
Silver	104SL004	Satin Nickel
Gold	104GT005	Off White

Collection: **Heathered LF**

FABRIC	OE KEY	WAND COLOR
Whisper	114MT021	White
Graphite	114MT016	Off White
Sand	114MT018	Off White
Slate	114MT019	Satin Nickel
Cream	114MT015	Off White

Collection: **Heathered RD**

FABRIC	OE KEY	WAND COLOR
Sand	124MT018	Off White
Slate	124MT019	Satin Nickel
Graphite	124MT016	Off White
Whisper	124MT021	White
Cream	124MT015	Off White

Collection: **Lemongrass Stripe**

FABRIC	OE KEY	WAND COLOR
Mocha	10433338	Off White
Cream	10433336	Off White
Champagne	10433337	Off White
Light Gray	10433339	Satin Nickel
Charcoal	10433340	Satin Nickel

Collection: **Linen LF**

FABRIC	OE KEY	WAND COLOR
Graphite	11431621	Satin Nickel
Cream	114WH026	Off White
Toffee	11431608	Bronze
Slate	11431615	Satin Nickel
Raffia	11431607	Bronze

Options & Upgrades

WAND COORDINATION

There are five wand colors (white, off white, bronze, satin nickel, and black) comprised of the shaft and the handle. The top half of the circle represents the shaft color, and the bottom half represents the handle color.)



White **Off White** **Bronze** **Satin Nickel** **Black**

Collection: **Linen RD**

FABRIC	OE KEY	WAND COLOR
Graphite	12431621	Satin Nickel
Cream	124WH026	Off White
Toffee	12431615	Bronze
Slate	12431608	Satin Nickel
Raffia	12431607	Bronze

Collection: **Solar Screen 10**

FABRIC	OE KEY	WAND COLOR
White	10420911	Off White
Off White	10420913	White
Iron	104GY012	Black

Collection: **Solar Screen 3**

FABRIC	OE KEY	WAND COLOR
White	10427013	White
Graystone	10427016	Satin Nickel
Black	10427017	White

Collection: **Solar Screen 5**

FABRIC	OE KEY	WAND COLOR
Gray	10420803	Satin Nickel
White	10420811	White
Chocolate	10420862	Black

Collection: **Solar Screen Grasses**

FABRIC	OE KEY	WAND COLOR
Sage	10433379	Bronze
Brown	10433380	Black

Collection: **Solar Screen Tides**

FABRIC	OE KEY	WAND COLOR
Champagne	10433376	Off White
White	10433374	Off White
Black	10433377	Black

Collection: **Tweed Rattan**

FABRIC	OE KEY	WAND COLOR
Champagne	10433341	Off White
Cinnamon	10433342	Bronze
Latte	10433345	Bronze

Collection: **Woodgrain**

FABRIC	OE KEY	WAND COLOR
Champagne	10433332	Off White
Toffee	10433333	Off White
Gray	104GY070	Satin Nickel
Snow	104WH074	White

Collection: **Woven Screen**

FABRIC	OE KEY	WAND COLOR
Auburn	10429745	Bronze
Khaki	10429747	Bronze

Cleaning Guide

Care Instructions
A brush-type vacuum attachment or feather duster should be used for cleaning. If your shade should become stained, you may clean it by dabbing the spot with a sponge dampened with lukewarm water. Avoid contact with window cleaning products as these may discolor your shade. Ultrasonic cleaning is not recommended or covered by our warranty.

Color Variation and Fabric Repeat Information
Color lot variations may occur due to the process of color application. For the best color match, order all shades for a room at the same time. Pattern availability and color lot match between orders cannot be assured. Any variation in color is in accordance with industry standards.

Natural fabrics are manufactured of fine yarns and woods. Natural and man-made fibers are spun and twisted into a variety of yarn styles, then pressure-dyed to color. Fine woods are milled into a variety of sizes and shapes and finished with stains and paints. Reeds and slats retain the unique natural grain and color variations inherent in all wood products. Certain species of bamboo can vary from deep yellow to pale green.

Terms and Conditions

Order Processing

Telephone Orders
Verbal orders are accepted as the dealer's responsibility. Each order will be repeated back by the Customer Service Representative. In certain instances, we may require written orders.

Duplicated Orders
All orders are confirmed after entry into our system. Customer Service is not responsible for duplicate orders caused by a written order following a telephone order or duplicate faxes.

Changes and Cancellations
All products are custom-made to your specifications under tight deadlines. Once production has begun on your order, changes and cancellations cannot be made.

Contract Orders
All Contract Orders must be processed through Contract Customer Service at 1-800-826-8021.

Freight

- Shipments outside the continental U.S. are subject to freight charges.
- Chargeable parts and returns for repair are subject to freight charges.

Pricing and Terms

All prices are subject to change without notice. Until credit is approved, terms are cash with order. Standard terms are Net 30 days from invoice date.

Claims and Returns

Defective Merchandise
All manufacturing defects must be reported to Customer Service within 30 days of receipt of shades. We may require the return of defective shades prior to repair or replacement.

Incorrect Merchandise
If any part of your shipment was made incorrectly,please advise Customer Service within 30 days. A replacement will be made at no charge if the problem was due to Levolor error. If the problem was due to dealer or customer error, the original order and replacement order will be full charge.

Returns for Repair
Prior to return for repair, contact Customer Service. We will request the order number, date, purchase order number, and type of product. Arrangements for return will be made at that time with directions as to how the shades should be returned. The package should be marked for easy identification both inside and outside, and should contain a written confirmation of the verbal repair instructions. Repairs should be packaged carefully. Product that has been mishandled or received in poor condition will be returned to the customer.

Chargebacks for unauthorized repairs or additional installation cannot be honored. All returns for repair are subject to freight charges.

Returns for Credit
Returns can be accepted only if prior authorization has been obtained from Customer Service. Authorization will include instructions as to how the merchandise should be returned. Unauthorized returns will be refused.

Freight Damage FedEx/FedEx Ground
- If freight damage is visible, refuse the shipment. FedEx will inspect the damage and return to the shipping location. Contact Customer Service for further information.
- If freight damage is concealed, retain all packaging materials and contact Customer Service immediately (must be notified within 14 days).

Freight Damage Common Carrier
- If freight damage is visible, refuse the shipment. The carrier will return the merchandise to the shipping location for inspection. Contact Customer Service for further information.
- If freight damage is concealed, retain all packaging materials and contact Customer Service immediately (must be notified within 14 days).

LEVOLOR®

levolor.com

LEVOLOR ©2023
5775 Glenridge Drive, Building A
Atlanta, GA 30328
1-800-225-1988 • 1-800-545-2325 fax • www.levolor.com

23-0009-047